

# ADV-300P

## Digital Advanced Trainer, 300 yards

1. Set Up Transmitter: Turn collar off  
Insert two 6v alkaline batteries, positive side out
2. ID Code: Press the ID Button (on front of trans.) for 3 sec. → display will scroll (2048)  
Release the ID Button when display goes blank  
Only random ID Codes are available
3. Stimulation: Press the ↑ to increase the stimulation level  
Press the ↓ to decrease the stimulation level  
Defaults to Level 1
4. Synchronize: Remove collar from charger → blinking yellow light on collar  
Hold transmitter 1 foot away and press TONE or CONTINUOUS → pulsating light  
Release transmitter button → blinking green light on collar  
\*\* or \*\*  
Hold red paper dots together → green light → out → yellow light  
Separate components 1 foot → blinking yellow light on collar  
Press TONE or CONTINUOUS → pulsating light on collar  
Release transmitter button → blinking green light on collar

## Advanced Trainer ADV-300 Features

- Adapter: 12v 200 mAmps ( part # 0400012) DC Preferred
- Batteries: Transmitter uses two 6v alkaline batteries. ( part # BAT-001)  
Battery life = Up to 30 hours use
- Charge: A full charge takes 14 hours and lasts up to 75 hours of use.
- Collar: Rechargeable and waterproof Blue receiver box  
Collar measures 2.15" x 1.66" x 1.19" and weighs 9 oz with the strap  
Black polyurethane coated web strap (1700118-5)  
Circumference ranges 9.5" to 19"
- Collar Lights: No light = Collar is off  
Blinking green = Collar is on  
Solid green = Lock out mode  
Pulsating green = Good tone is activated  
Blinking yellow = Programming mode  
Blinking red = Low battery (20% or less remaining)  
Pulsating red = Stimulation is delivered  
Solid red = Charging
- Probes: included in the RK-11
- Range: Up to 300 yards in flat, open terrain.
- Stimulation: Programmable, 7 levels  
Displayed on transmitter  
Defaults to Level 1  
Over-Stimulation protection = 10 second lock-out period after 10 seconds of stim.
- Tone Key: Sounds the good tone command  
Displays "0" and the tone bar when pressed
- Transmitter: Water resistant and operates one collar Blue  
Transmitter measures 3.5" x 1.75" x 0.625" and weighs 2.6 oz.  
Battery Plug Assembly = 1700130-1 (includes "O" Ring and split ring)
- Trans Buttons: Continuous = Continuous stimulation  
Momentary = Momentary stimulation  
ID = Changes ID Code  
Tone = Good tone only sounds (no stimulation)  
= Increases stimulation level

↓ = Decreases stimulation level

Trans Display: Left side = LO BAT displayed when power is low AND any button is pressed

PROG displayed after ID button is pressed

TONE BAR displayed when tone is delivered

Center = NUMBER identifies the stimulation level

Blank = Display blanks 1/2 second after the last button is pressed

Video: VIDEO-52 Dog Star training

## Advanced Trainer ADV-300 Troubleshooting Tips

Walk through programming and synchronization.

Check batteries for proper size, type, and position.

Collar will not deliver stimulation: Re-synchronize and check for stimulation.

Collar will not audibly tone: Re-synchronize and check for tone.

Collar has solid red light:  
→ recharge collar

Place collar on charger for 5 min → light out  
Light on → try to resynchronize  
If it does not synchronize, contact

Innotek.

Collar not taking charge: Check adapter and outlet

Collar not holding charge: Drain collar completely and recharge 14 hours  
Make sure receptacle cover is in place when collar is in use.

Interference: Change the ID Code and resynchronize.

Low Range: Check the antenna on the transmitter  
Recharge the collar and/or change the batteries in transmitter

Losing Programming: Check for contact with other magnets,  
or metal tags or metal collars on dog.

Metal Tags or Collar: Short across the probes, turn the collar on or off, change mode

